
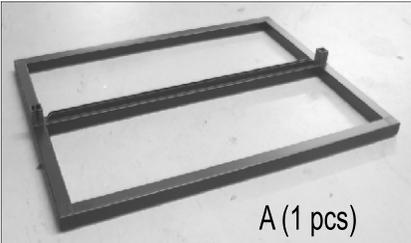



Assembly Instructions

Top Panel : 24" x 24" panel with Total printable area of 22.50" x 22.50"


Bottom Panel : 24" x 36" panel with Total printable area of 22.50" x 34.50"

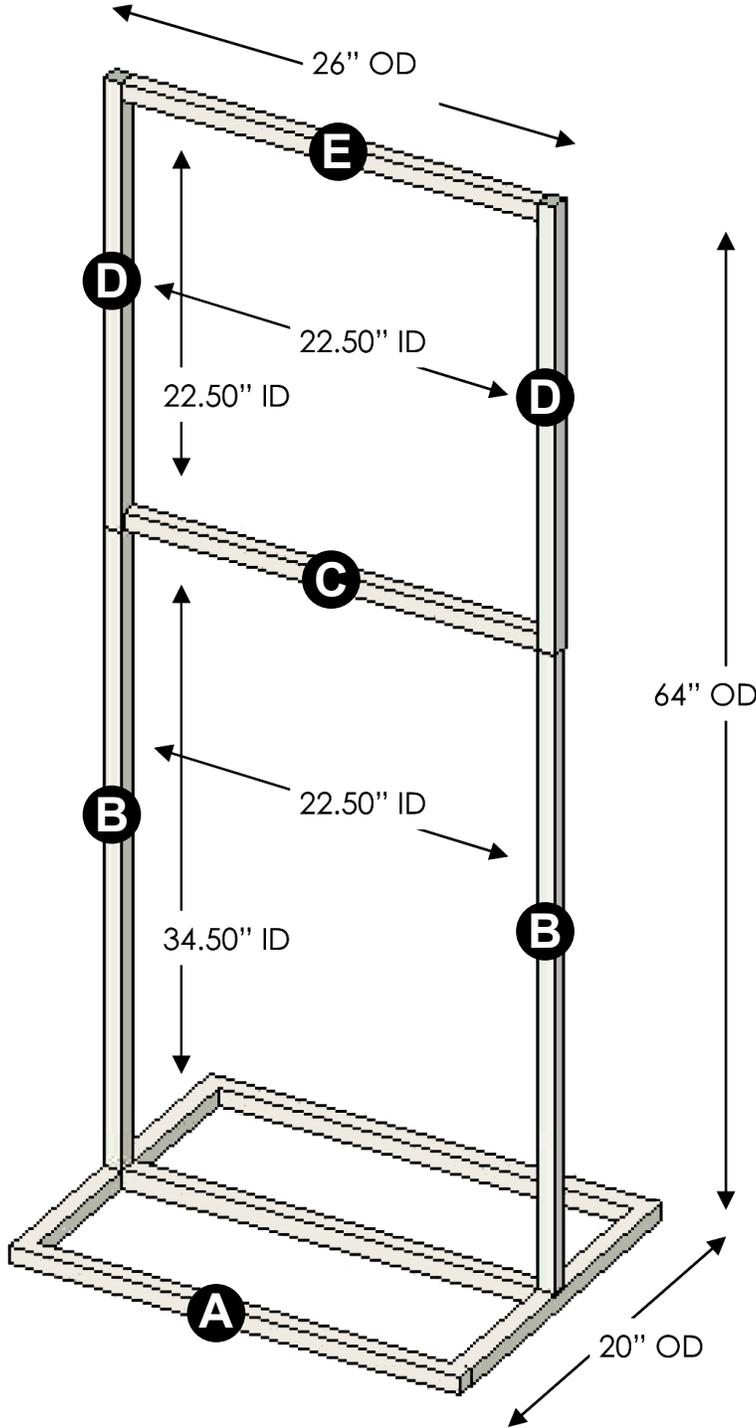


1. Figure A is the base and it is pre-assembled.

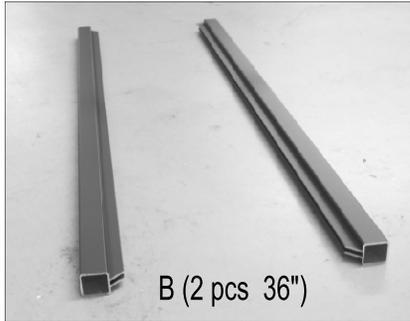

2. Items "B" should be fit onto the knobs of base (A) in the orientation shown with channels on the inside. Slide in the larger bottom sign board.

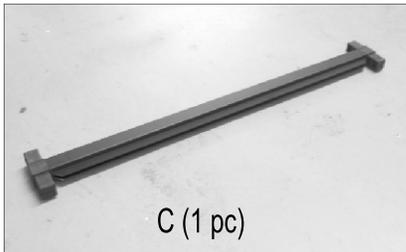

3. Fit the knobs on Item "C" into the holes in tubes (B). May require light tapping.

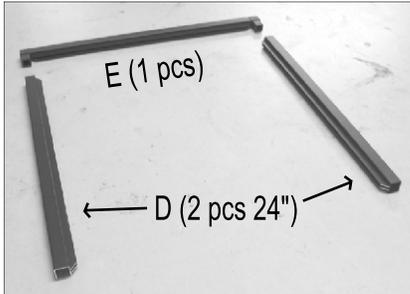

4. Items "D" should be fit onto the knobs of item (C) the same way as in step 2. May require light tapping. Slide in the top sign, then fit item "E" onto items (D) in same way as step 3.